


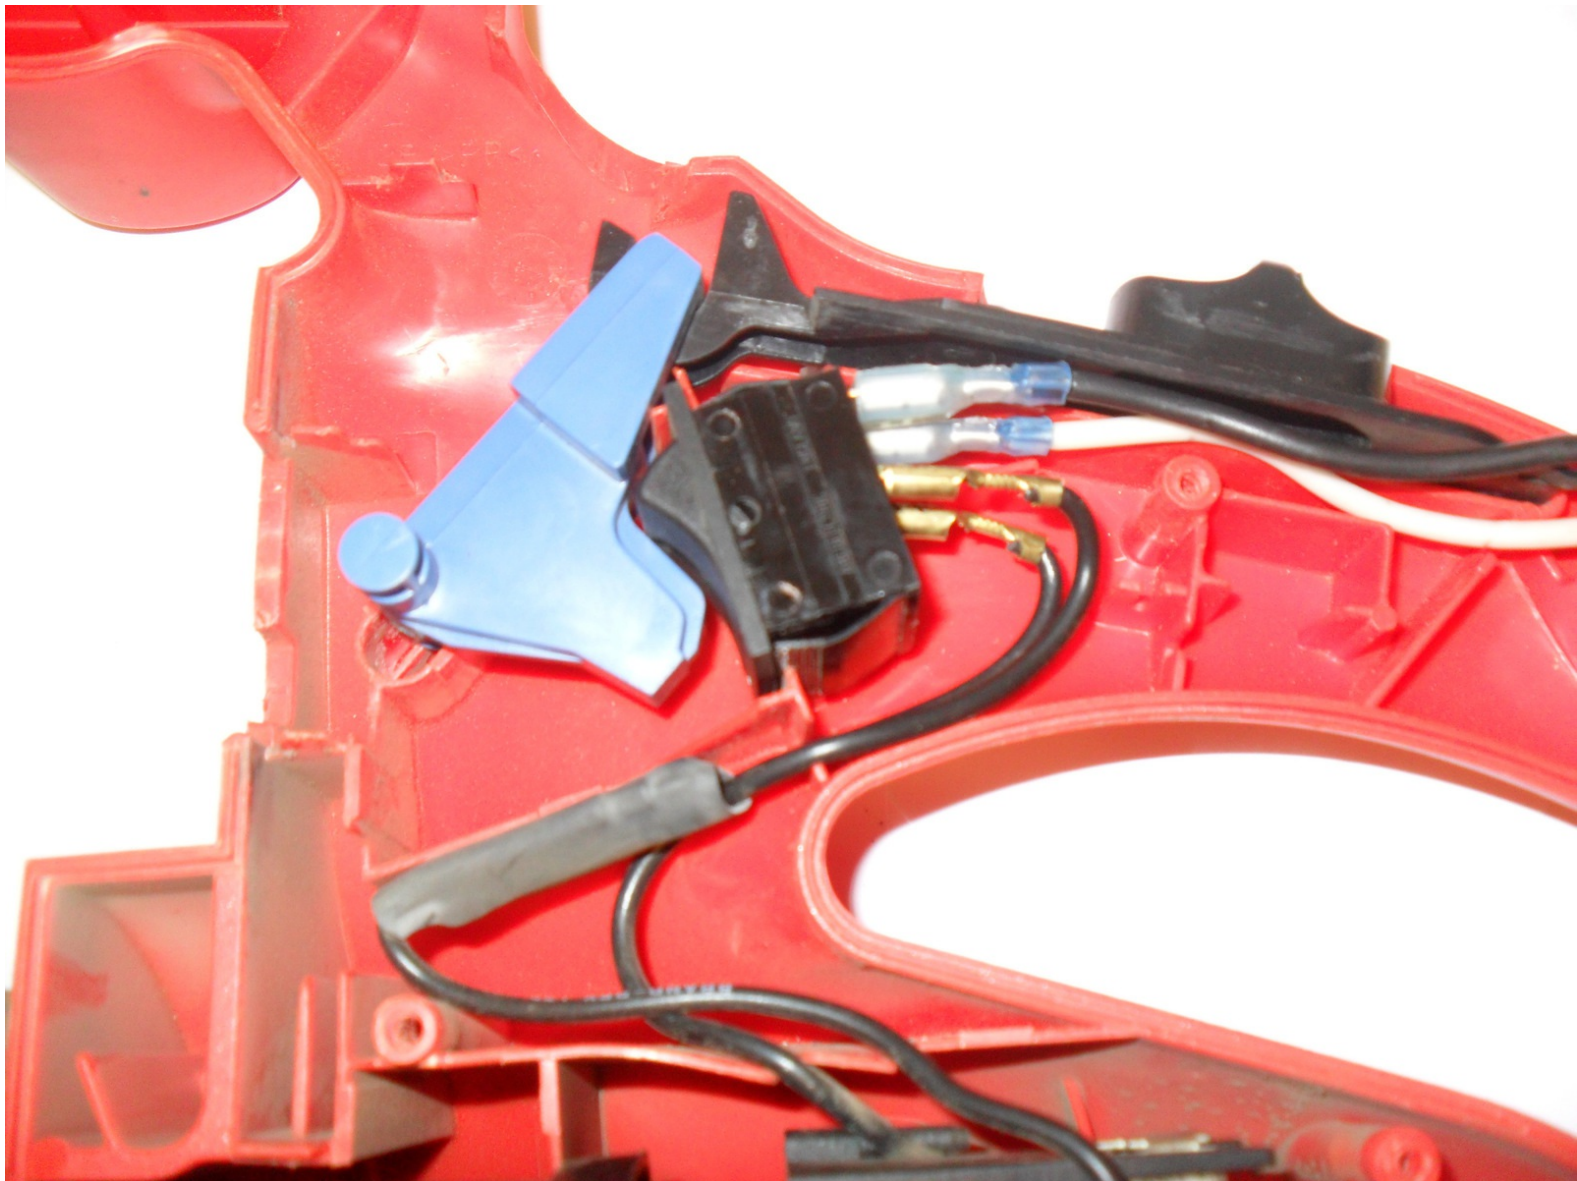

Black and Decker BV2500 Type 4 Switch Replacement

Replacing the switch on the Black and Decker BV2500 Type 4.

Written By: Jon Gori



INTRODUCTION


This guide will take you through the process of replacing the switch on the Black and Decker BV2500 Type 4.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Clamshell (Black Outer Casing)

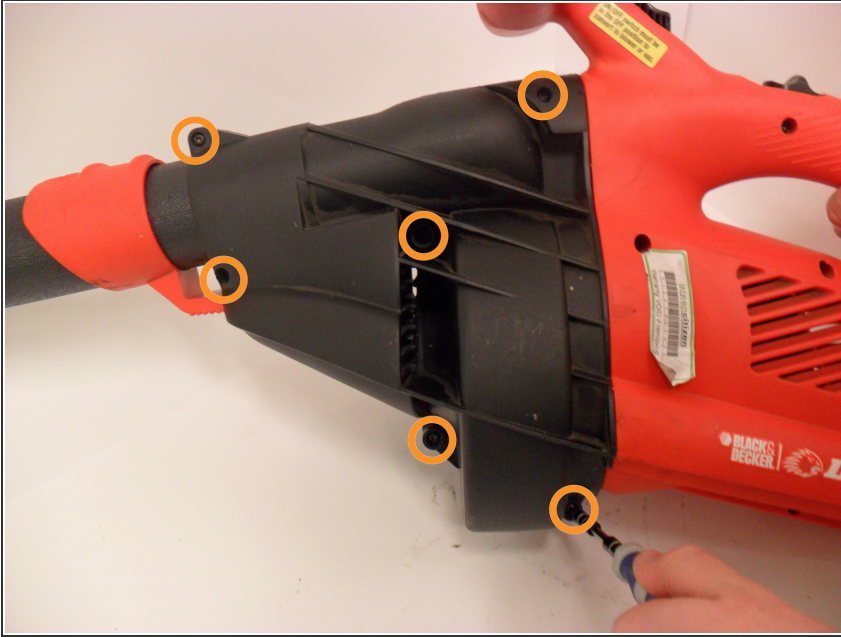

- Locate and unscrew the six 20 mm Phillips #2 screws in the black plastic casing (clamshell) with a Phillips #2 screwdriver.

Step 2





- Using your hands, remove the blower tube and clamshell.
 - To remove the clamshell, pull apart starting from the bottom until it is pulled out from the notches. Then slide it out away from the device.

Step 3 — Switch



- Locate and unscrew the ten 20 mm Phillips #2 screws in the orange casing with a Phillips #2 screwdriver.
- Using your hands, lift off side of the orange casing with the screws facing you.

Step 4

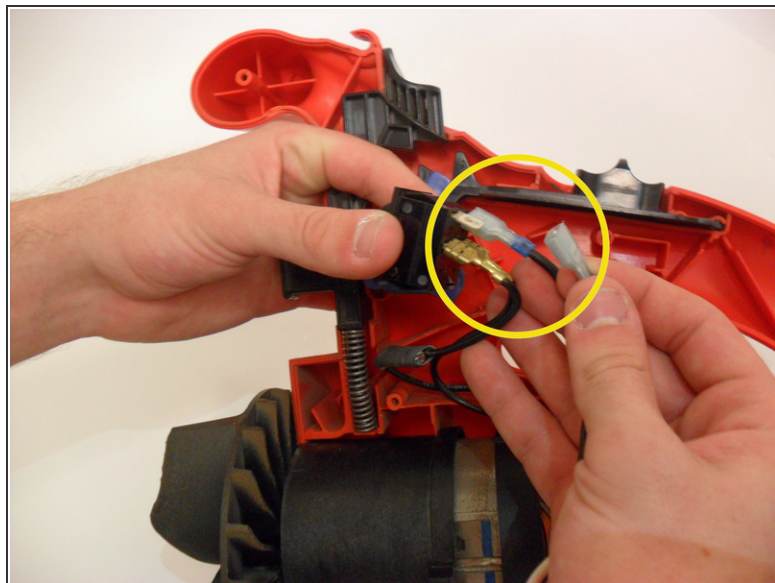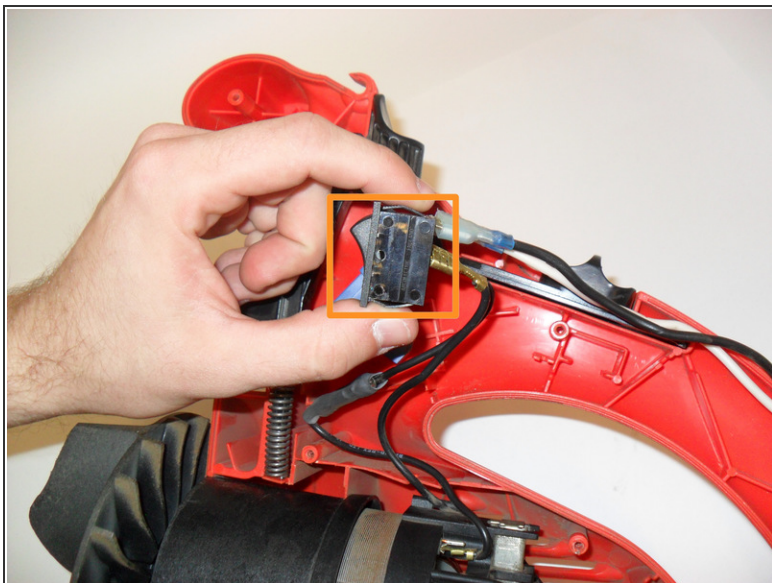

- Locate the switch on the handle of the blower.
- Carefully remove the four wires that are attached to the switch.
 - Use your hand to push in the sides of the switch and slide out the wires.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 10:02:05 AM.